



# INTRODUCTION



### **INTRODUCTION**

#### • Target :

Prupose a visual guide of the differents steps to build a  $\mu$ Delta printer.

#### • Designers :

Hugo Flye Thomas Batigne Antony Soury

#### • Authors :

eMotion Tech : http://www.reprap-france.com

Antony Soury Loic Déchaseaux Hugo FLye Thomas Batigne Anthony Berna

#### • Photographics Credits :

Pictures and 3D représentations made by eMotion Tech : http://www.emotion-tech.com Pictures Director : Antony Soury

#### Sources :

http://reprap.org/wiki/reprap http://www.repetier.com/

#### • Licenses :

µdelta : CC BY-NC-SA 4.0 This document : CC BY-NC-SA 4.0 http://creativecommons.org/licenses/by-nc-sa/4.0/

 $\odot$ 

• Update :

Last Update : 10/06/2016

• Links:

You can found more informations on the following links :

RepRap community : http://reprap.org/wiki/reprap Repetier-Host software : http://www.repetier.com/ 3D models database : http://www.thingiverse.com/





# SUMMARY

INTRODUCTION	2	ADD-ONS	58
INTRODUCTION	3	HEATED BED	59
SUMMARY	4	<ol> <li>Hardware update</li> <li>Software update</li> </ol>	59 64
µDELTA INTRODUCTION	5	·	
SAFETY INSTRUCTIONS	7		71
ASSEMBLY	8	SPOOL HOLDER 1. Material update	72 72
BILL OF MATERIALS	9	LED RING	77
A. Printed parts	9	1. Material update	77
B. Acrylic parts	9		
C. Smooth rods and connecting rods	10	ANNEXE	79
D. Mechanical parts	10	MAINTENANCE	80
E. Screws, nuts and washers	10	RECOMMANDATIONS	80
F. Electronic	11		
G. Others	11		
H. Hexagon Kit	12		
I. Options	13		
TOOLS	14		
MECHANICAL ASSEMBLY	15		
ELECTRONIC ASSEMBLY	50		

# **µDELTA INTRODUCTION**

µdelta is developed by eMotion Tech. This new 3D printer is easy to assemble and to operate without loss of performances.

#### Data sheet :

#### DATAS

- Printing surface : Ø110x190mm
- Layer height : [0.1-0.35]
- Electronic type : Teesylu + 4 Stepsticks (integrated firmware)
- Motors : NEMA 17
- Belt type : GT2
- Extrusion Head : Hexagon 0.4
- Dimensions : Height 440mm, Width 250mm, Depth 250mm
- Nominal printing speed : 70mm/s
- Max speed : 200mm/s
- Nominal speed : 130mm/s
- Average precision (X,Y) : 100 microns
- Average precision (Z) : 50 microns
- Operating system Windows XP, Vista, 7,8, Ubuntu 12+
- Consumable : PLA 1.75mm (or ABS and others plastics with heated bed opton)
- · Provided with Repetier-Host pre-configured for µdelta
- Connectivity : USB
- Power supply provided : 12V, 120W

#### STRUCTURE

- Lasercut Acrylic 5mm
- Extruder core printed in ABS 0.2mm
- Smooth rod 8mm
- Manufactured plate plywood 12mm

#### ERGONOMY

Easy to mount : A 3D printer kit with an intuitive assembly

- Simple electronic, no soldering
- Easy wiring and assembly
- · Belt adjustment with ergonomic belt tensioners

Easy to calibrate : A simplified software

- Fully software calibration
- Pre-configured open-source software (no firmware upload required, Repetier Host and Slic3r pre-configured)

#### Easy to maintain

- · Quick height adjustement with the software
- Easy to reload the filament



#### **OPTIMISATION AND UPGRADE** (Options and developments available)

You can improve the µdelta by adding the following options :

- Spool holder with fan
- LCD screen controller to print without computer
- Lighting with circular LED
- Heated bed



# SAFETY INSTRUCTIONS

#### **General safety instructions**

# NEVER LEAVE THE PRINTER WORKING WITHOUT SUPERVISOR.

The nozzle can reach 270°C, to avoid burning, do not touch the nozzle while the printer is working.

A supervisor is needed when the printer is used with young people.

#### KEEP PRINTER AWAY FROM CHILDREN AND ANIMALS

Operate in a ventilated room. Plastic fumes effets are not known. In case of use in a closed room, we recommend the use of an extractor fan.

The addition of protections is your own responsibility. Safety can be improved by :

- An emergency stop button
- Housing protection
- Smoke detector

#### CE marking

µdelta is a 3D printed kit. It includes all the parts you need for assembling but does not include additional protections.

#### **Electrical safety**

The power supply provided is labelled CE. The power supply is protected against short-circuit and do not need any modification. The  $\mu$ delta operate at voltage of 12V and is not concerned by the low voltage directive.

#### **Further informations**

Informations above are not exhaustive.

We used sources of informations we consider as reliable. However, we cannot guarantee that all these informations are true and complete.

We assume no liability for loses, injuries or damages due to assembly, transporting, storage or removal of the product.




# ASSEMBLY



## **BILL OF MATERIALS**

#### A. Printed parts

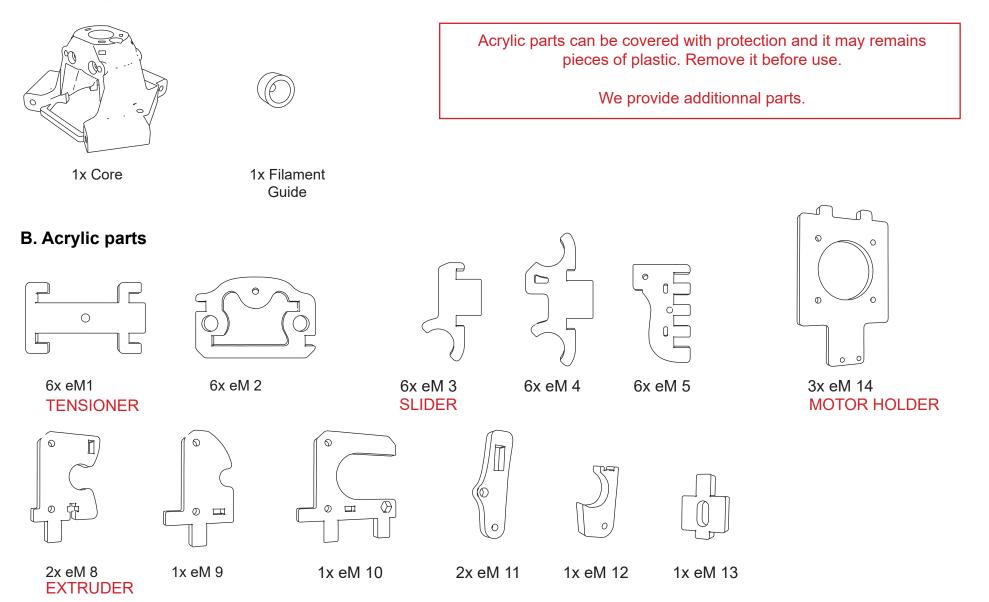



C. Smooth rods and connecting rods





6x Connecting rod

#### **D. Mechanical parts**



9x Linear bearing




3x GT2 Pulley



3x GT2 Belt



3x 624 Bearing 1x 604 Bearing

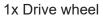

#### E. Screws, nuts and washers



6x M2.5x16 screw 15x M3x12 screw 12x M3x20 screw 4x M3x25 screw 3x M3x30 screw 10x M3x50 screw 16x M4x25 screw 1x M4x50 screw 12x M5x30 screw 3x Wood screw





12x M5 Nut

1x M3 Nylstop Nut

6x M2.5 Nut

32x M3 Nut

20x M4 Nut

3x M3 Wing Nut



45x Ø3 Washer 19x Ø4 Washer 4x Ø4 Big washer





4x M3x3 Grub Screw (maybe pre-mounted in pulleys, drive wheel and printhead)





#### F. Electronic

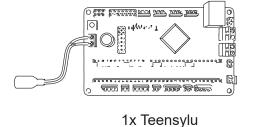


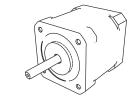

4x Nema 17 motor



3x Endstop

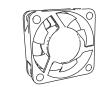

2x 3x3 Fan



4x Stepstick



1x Power supply 1x USB Link

# G. Others



# H. Hexagon Kit











1x Hexagon hot end

1x Cartridge heater


1x Thermistor

1x Allen key 3

1x Wrench 4.5



## I. Options

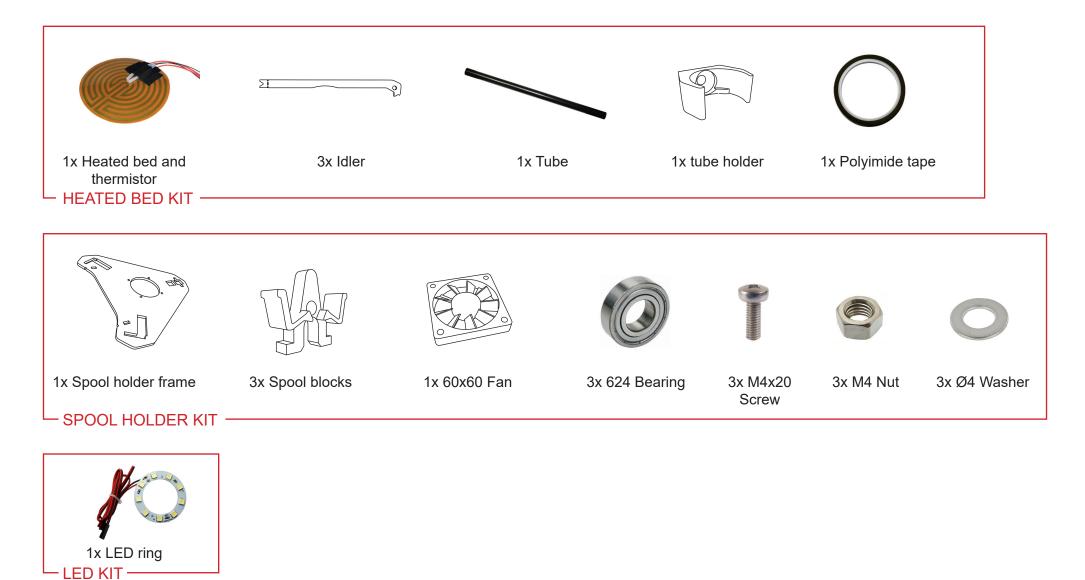



# **NEEDED TOOLS LIST**


- Mallet
- Slot screwdriver
- Philips screwdriver
- Wrench 5.5 et 7
- Allen key (fournie)
- Long nose pliers
- Cutting pliers
- Utility knife
- Meter




# MECHANICAL ASSEMBLY



If you have a heated bed, please read the «Add-On» section to know how to mount and set it.

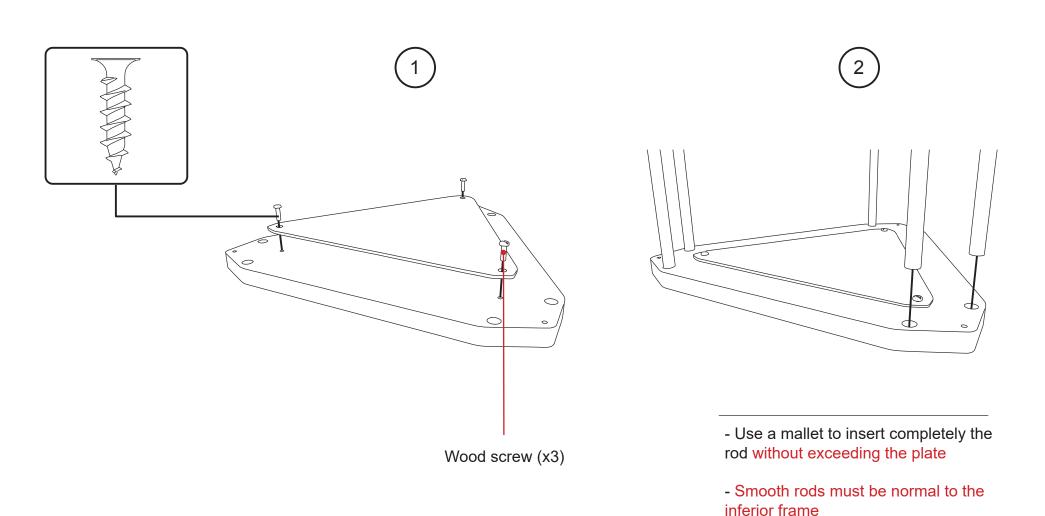




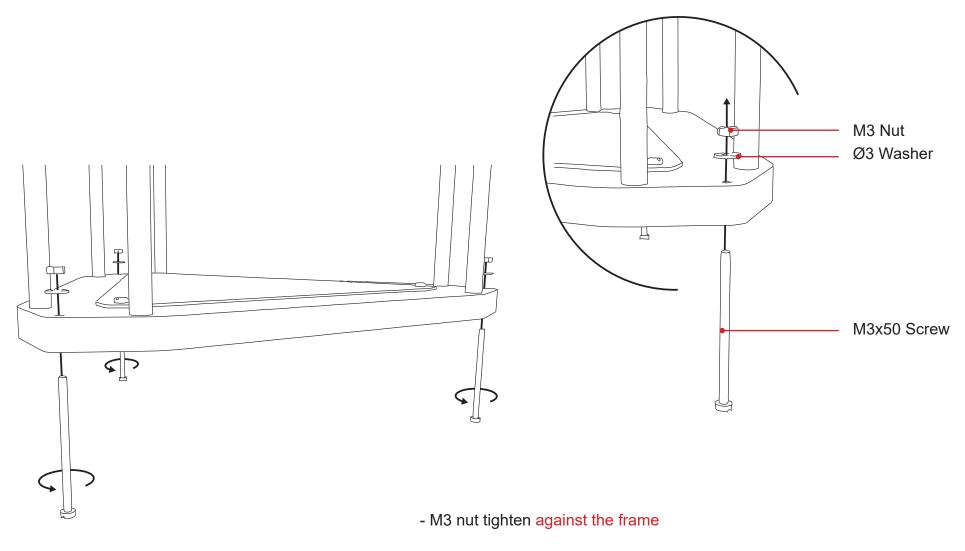


- Repeat this operation for each corners




#### Inside the µdelta

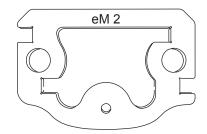

Outside the µdelta

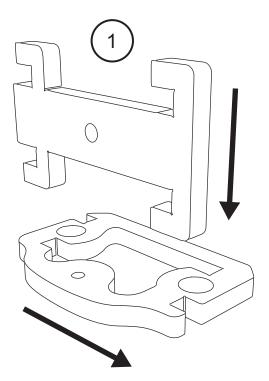

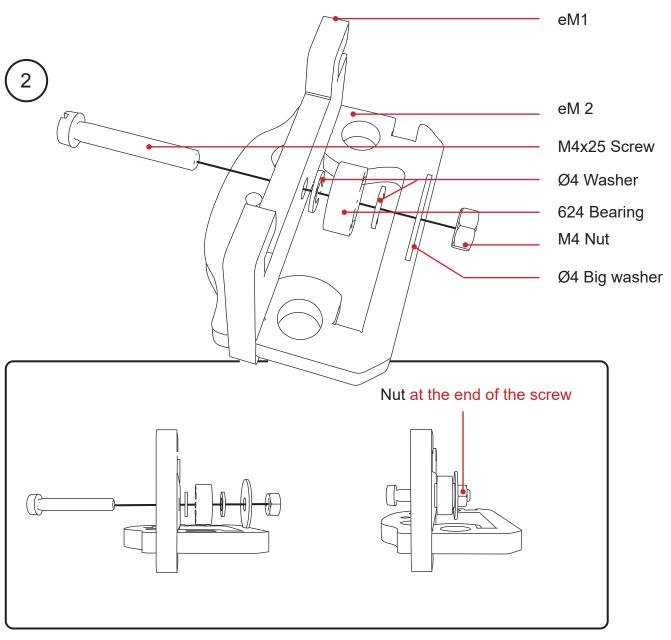




Acrylic parts can be covered with protection and it may remains pieces of plastic, remove it before use.

/ 18



 $\left( 1\right)$ 

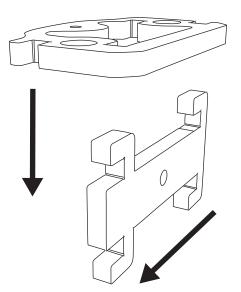

Tighten nuts moderately to avoid breaking acrylic parts

Tighten against the washer

2




# M4 Nut

3

**Tighten Lightly** 



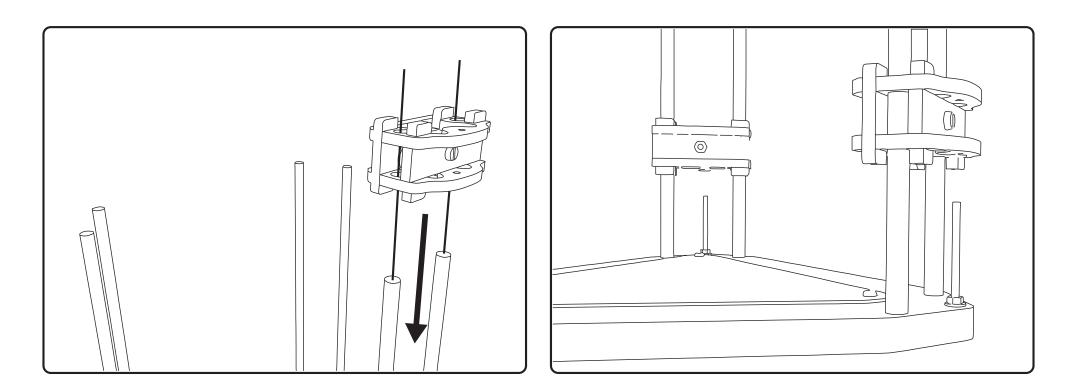


Repeat this operation for the other tensioners

Inside the µdelta

<u>\_</u>\_\_\_ 0


Outside the  $\mu$ delta



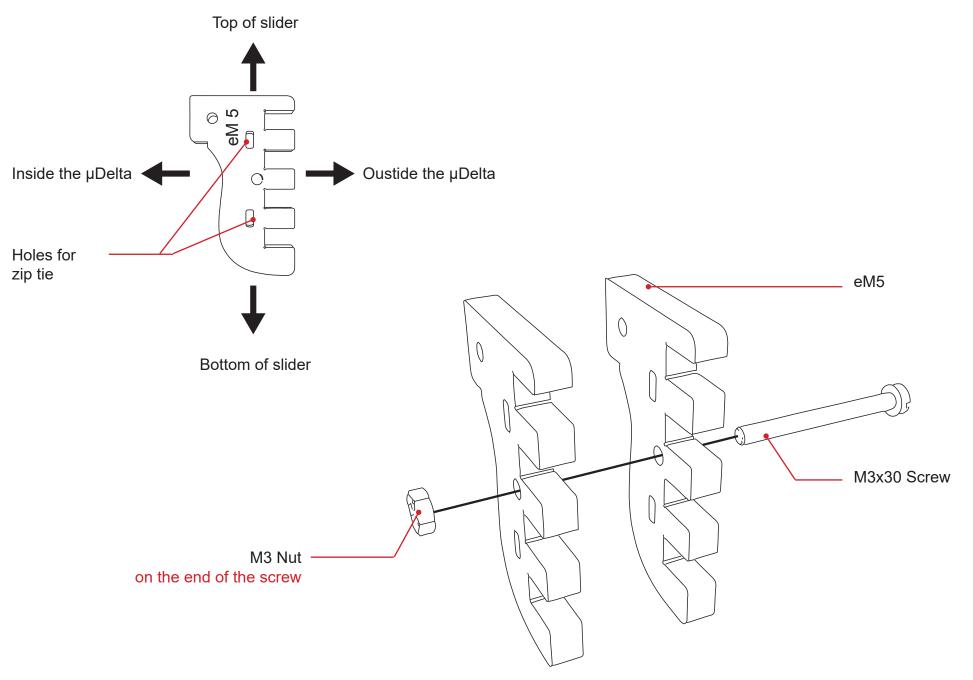


**Caution** : Assemble all sliders in the same way.



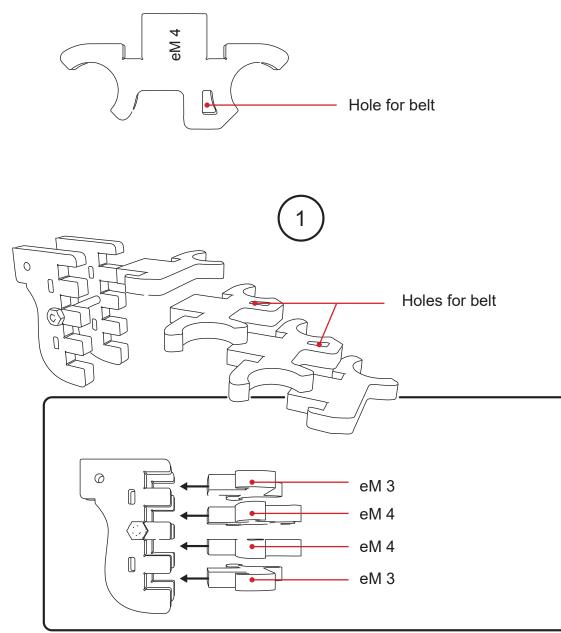



**Note** : After tightening screw, eM 3 parts may move, it is not a problem

Repeat this operation for the others sliders

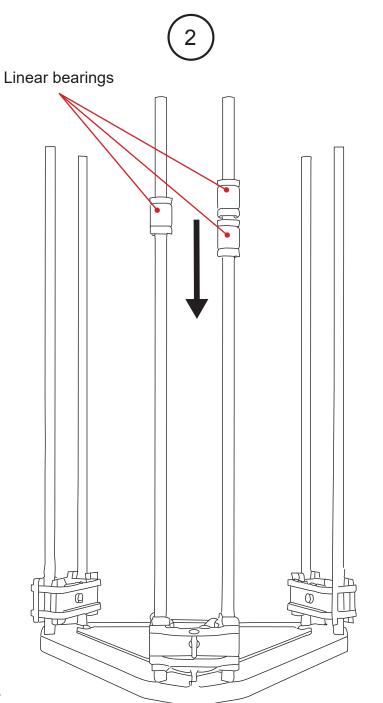



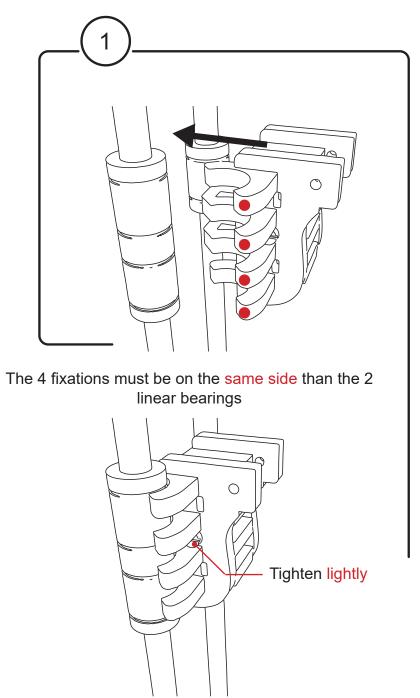


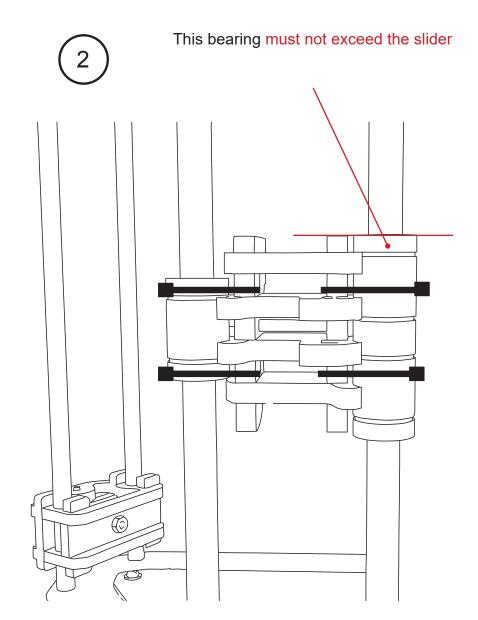

Insert a zip tie in each holes, tighten the zip ties to fasten the slider



Shaft Support

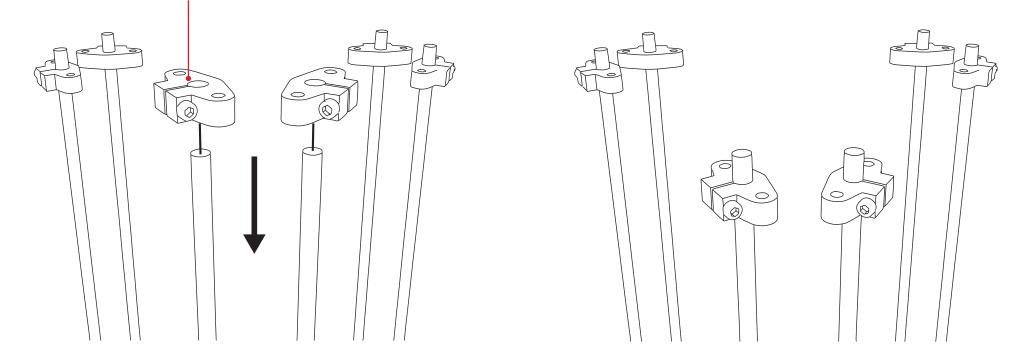


Take care of the way of shafts supports

Note : Do not tighten


Note : If shaft supports are equiped with a counter bore, be sure to orient the bore so that it is against the wood.



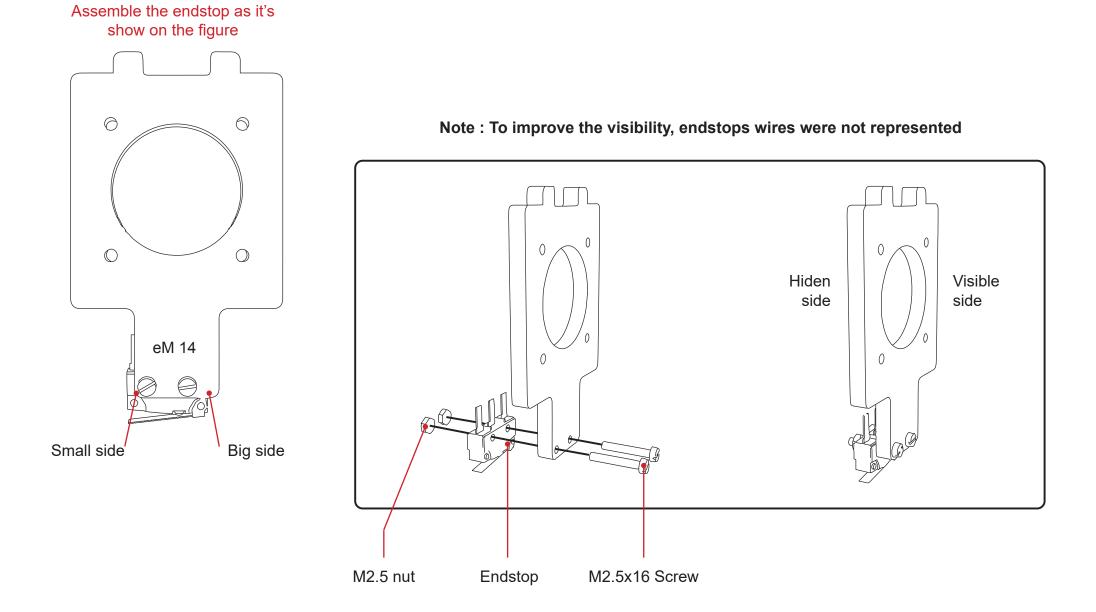





Back

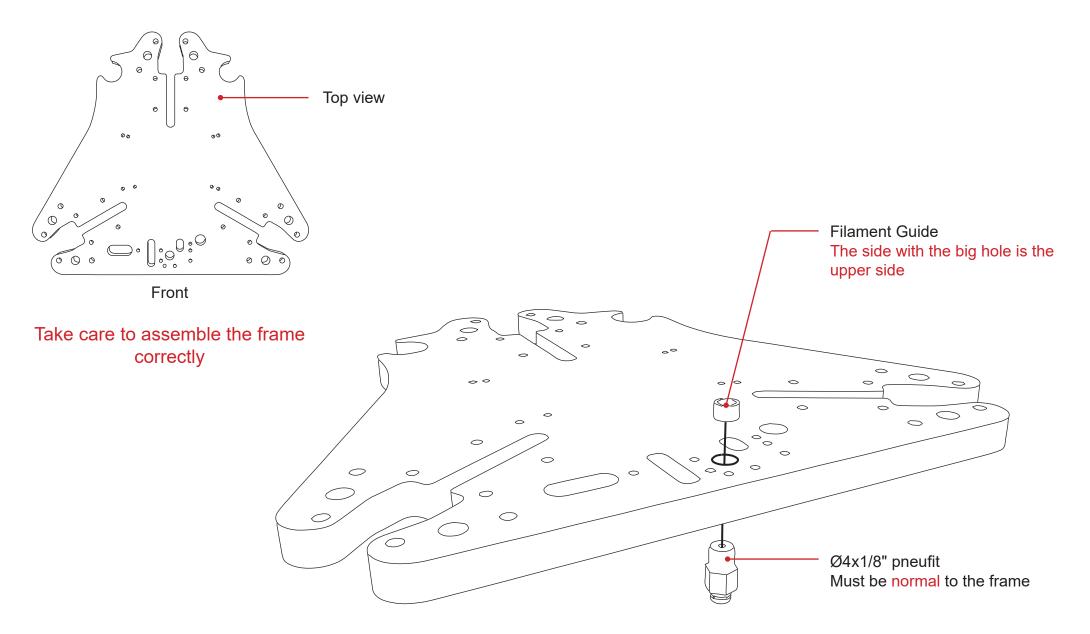




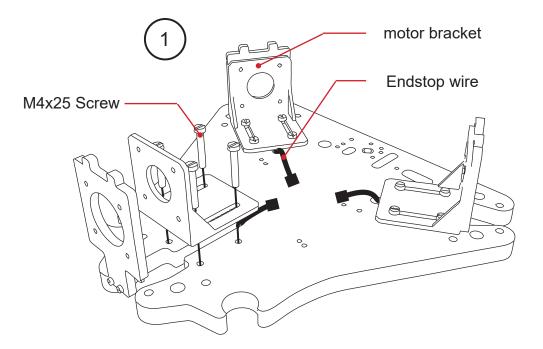


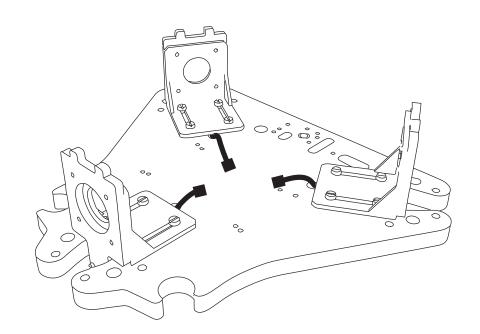

Put the endstop wires before the motors brackets

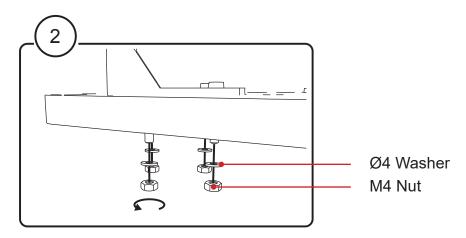




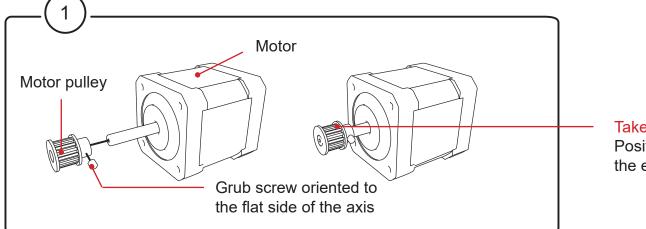


Take care of the way of the pulley Position the pulley at 3mm from the end of the motor axis



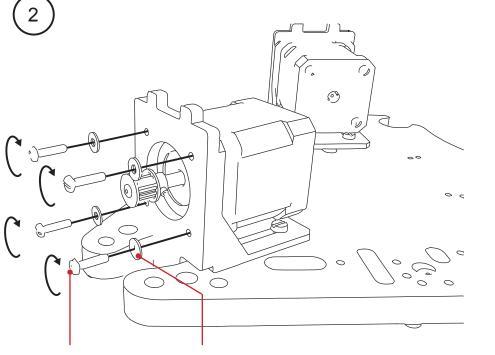






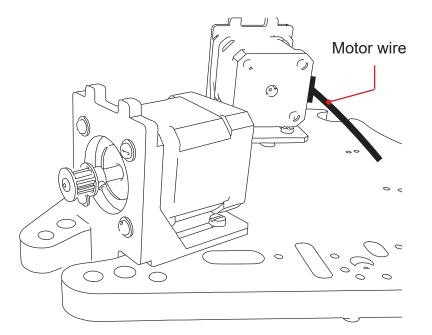



#### Motor wire must be on the side




 $\left( 1\right)$ 

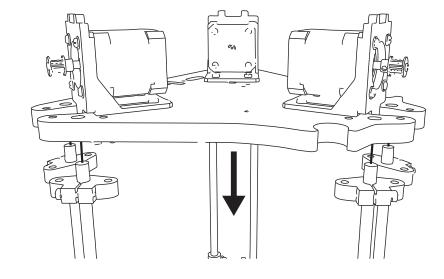


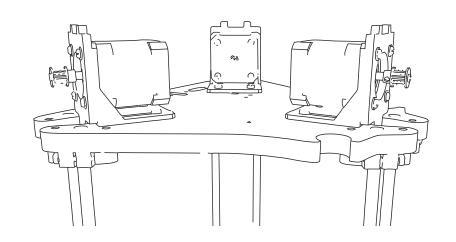

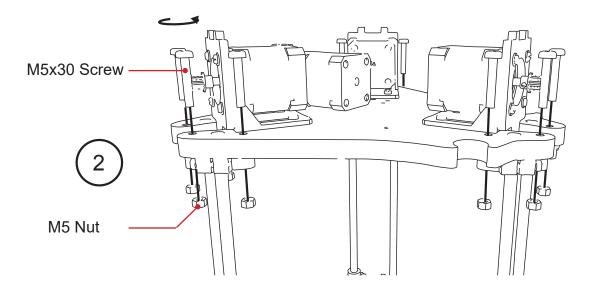

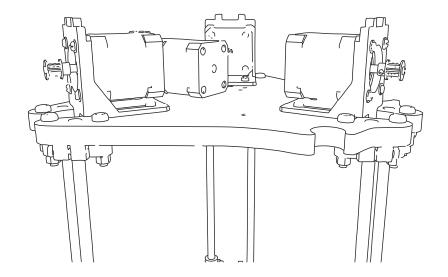




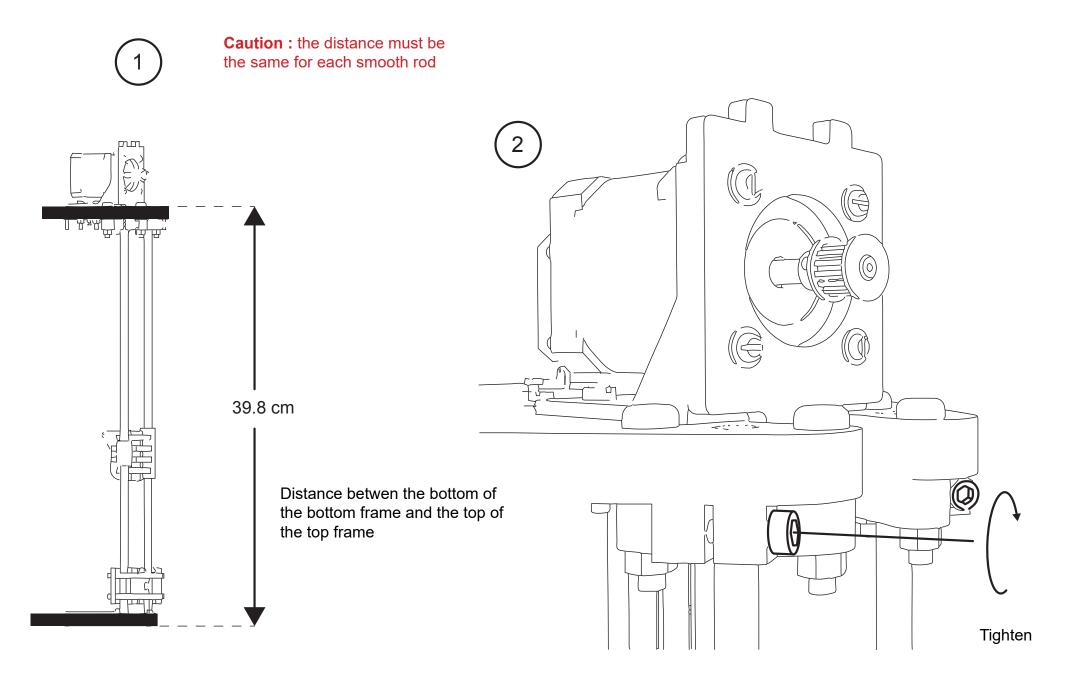




Teeth in the direction of the pulleys

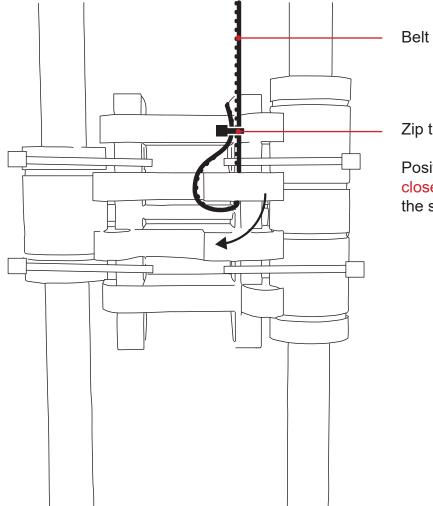


1

Zip tie Position the zip tie as close as possible to




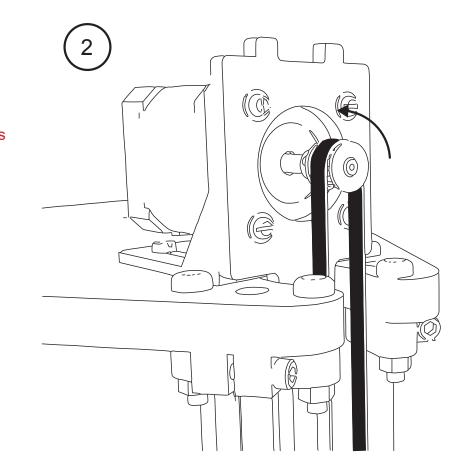



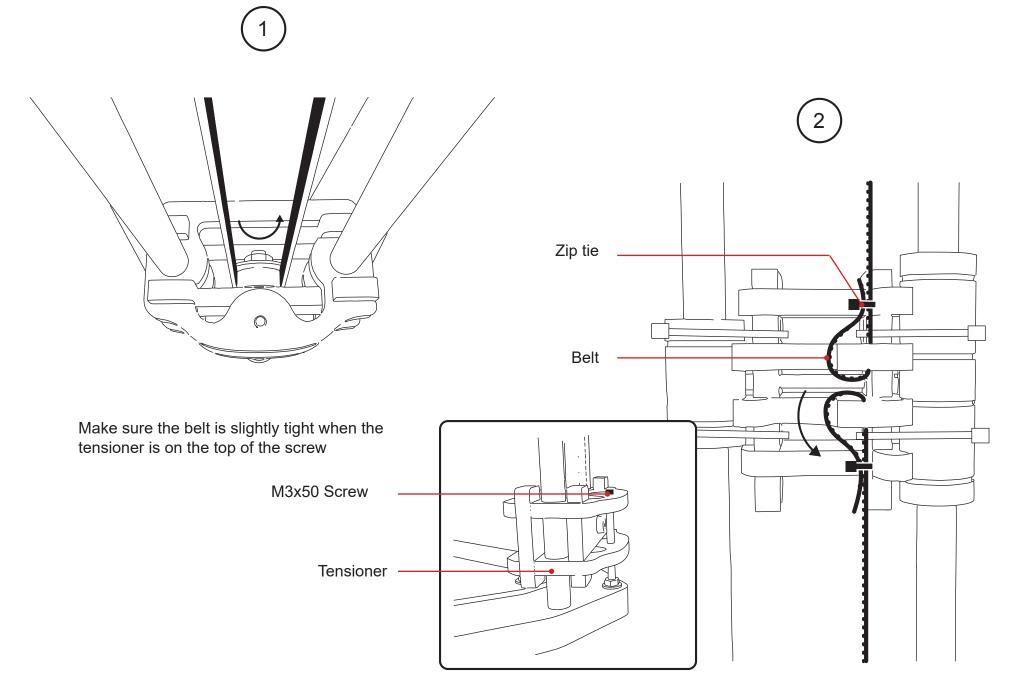




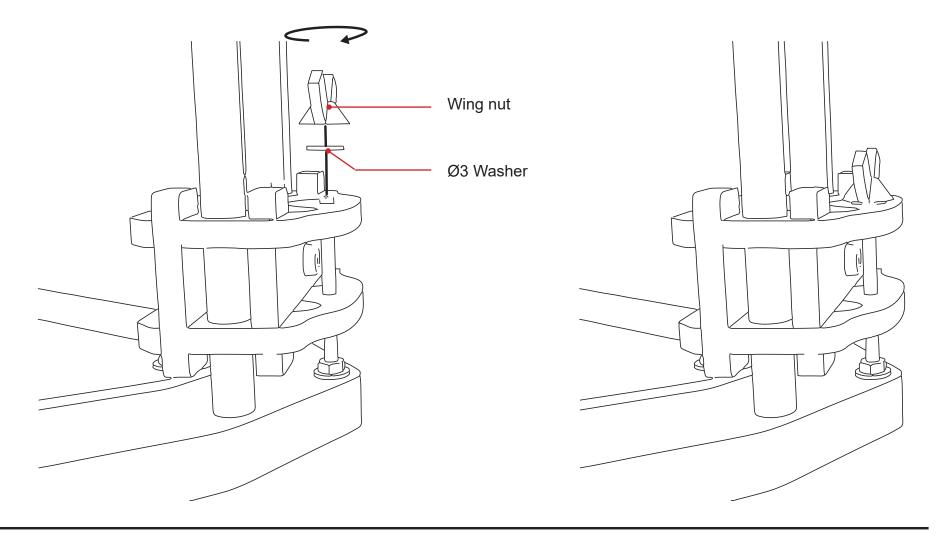


Thigten the nut to tight the belt

The belt doesn't have to be too tight to avoid deformation




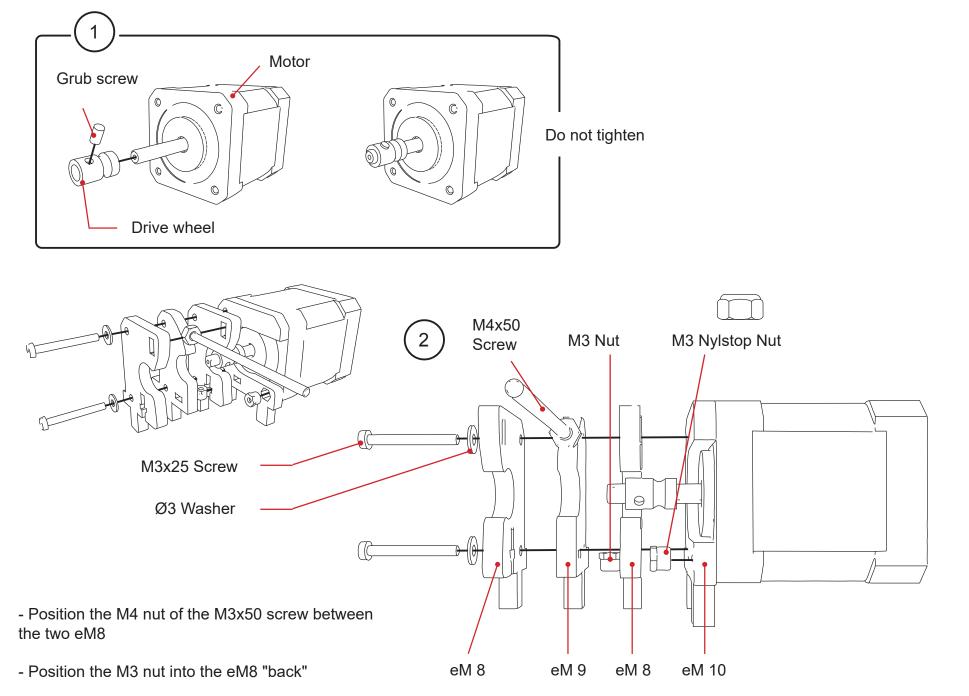




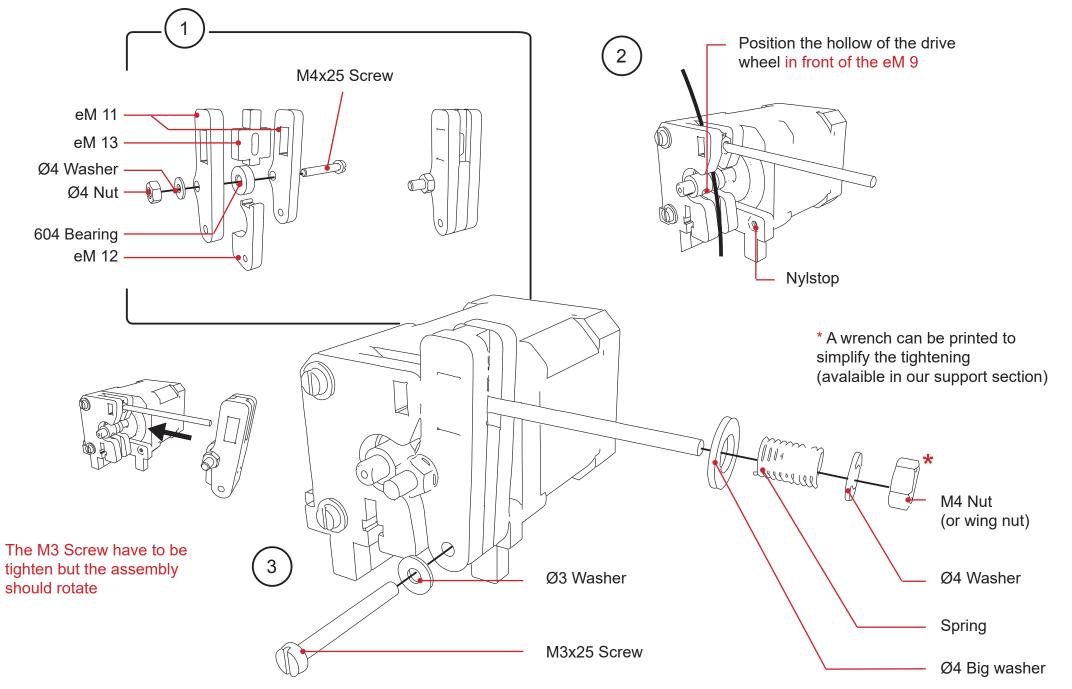




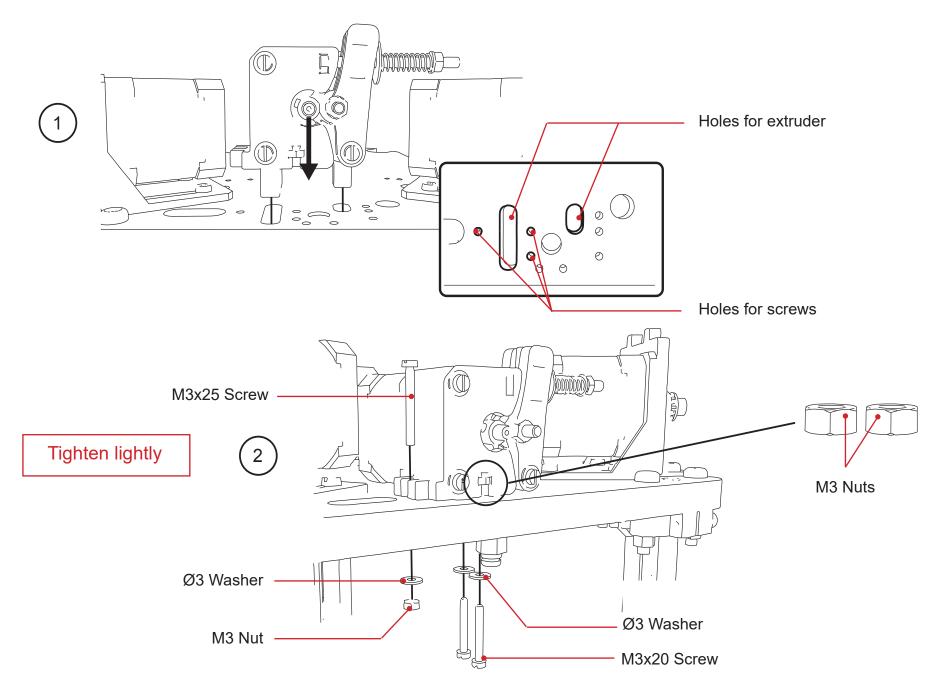



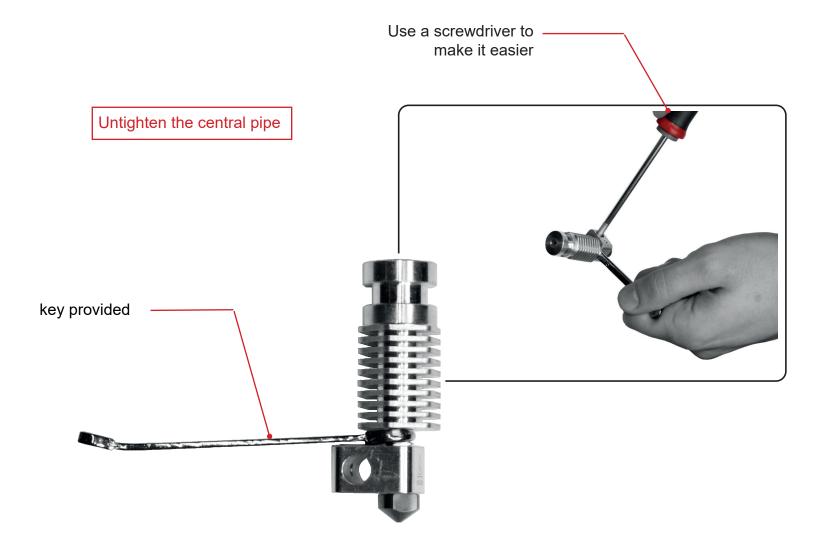




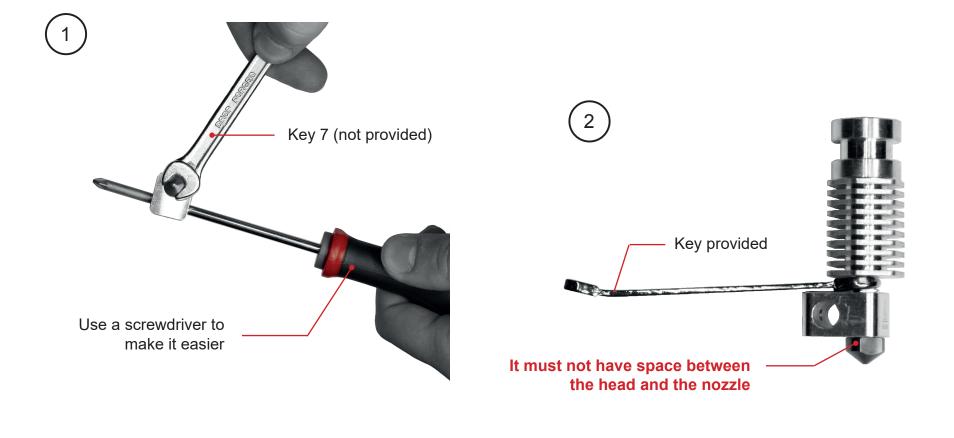







### Print head : direction of assembly

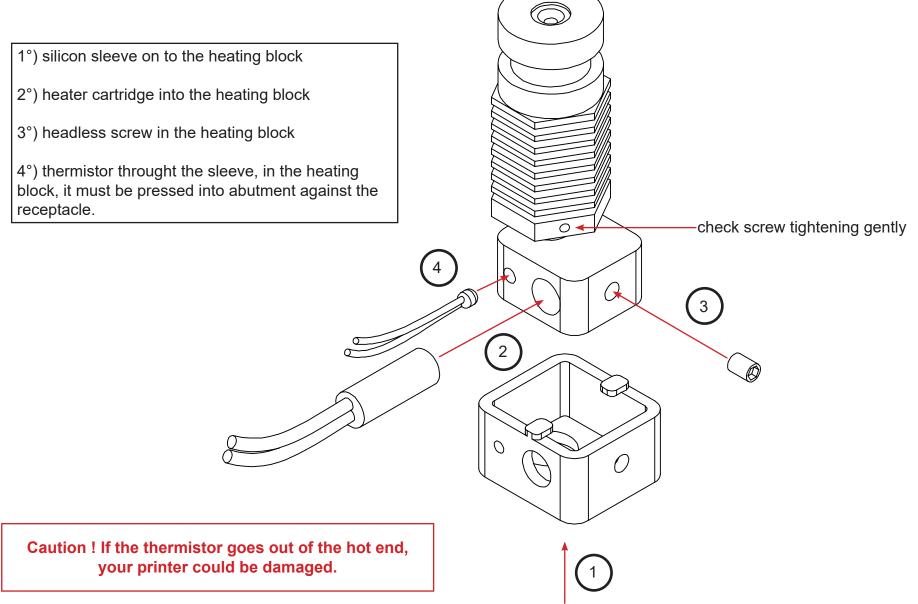




Unscrew the filament guide

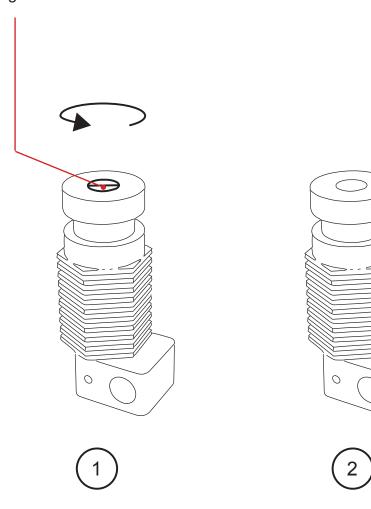

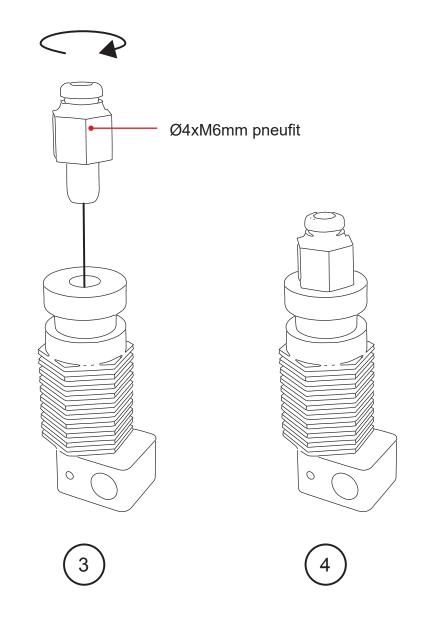




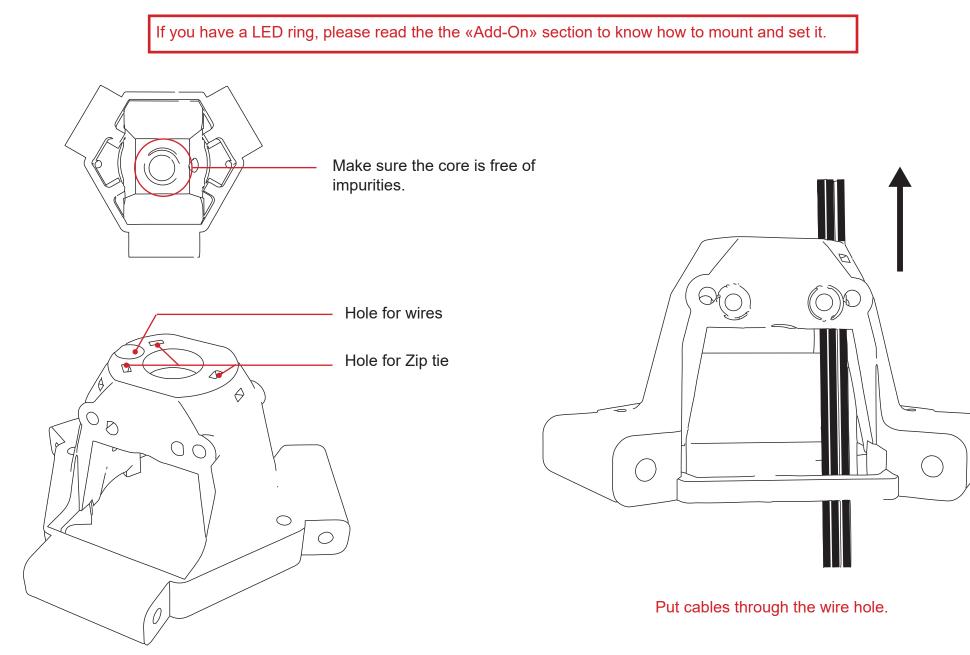







# M3x20 screw

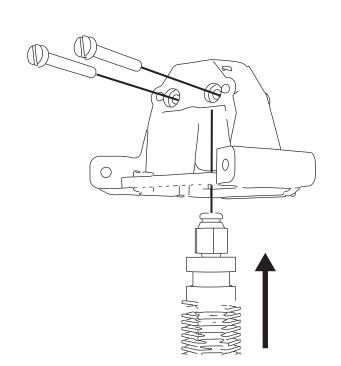

1

Position the Hexagon against the core before screwing

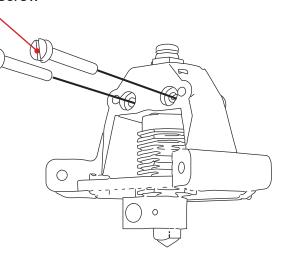

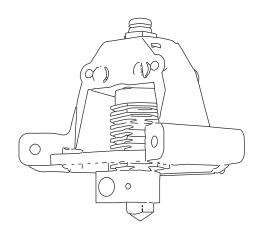


3


Tighten




The side with the sticker must be oriented toward the hotend

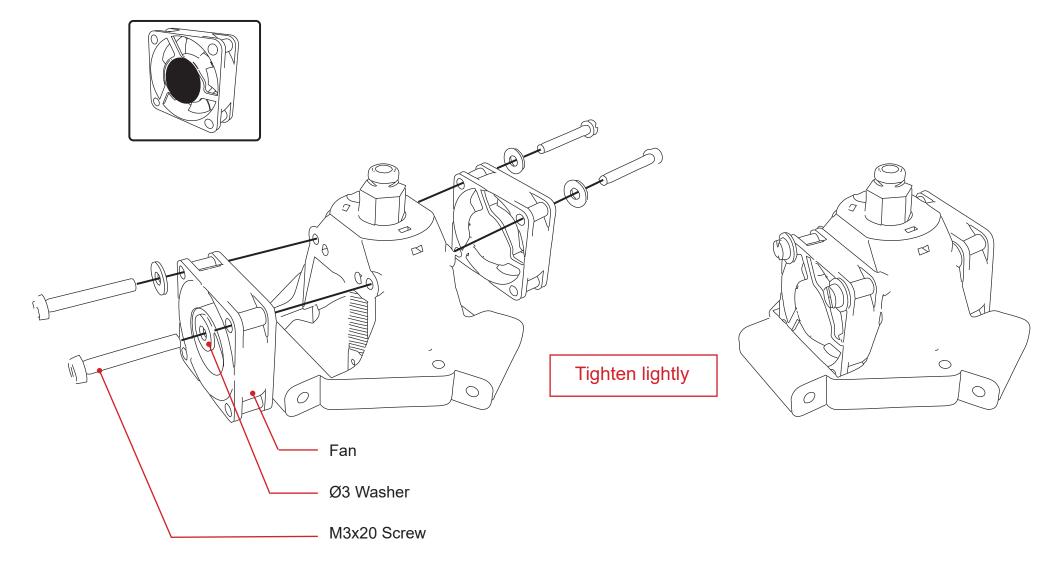




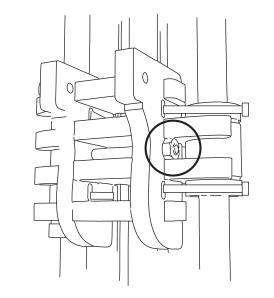


**Note :** Check this nut is tighten

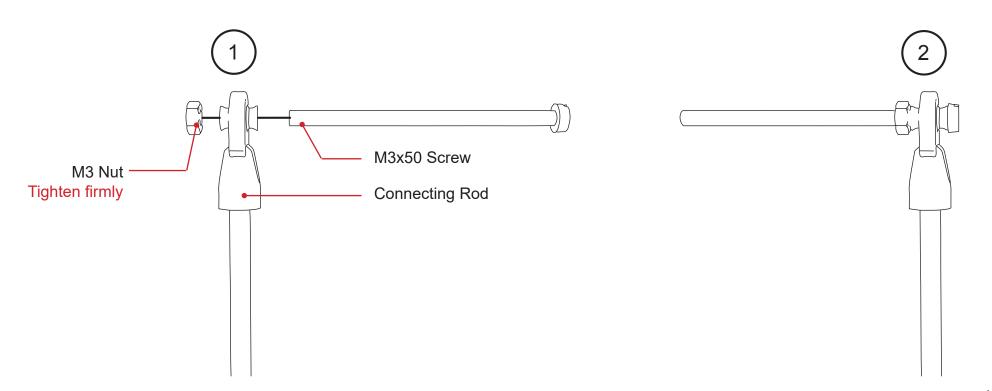



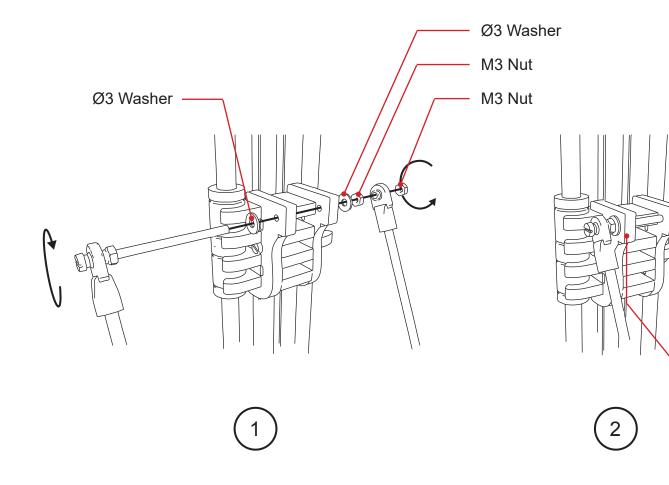

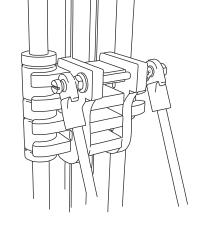


3

Caution : The assembly must not twist the slider.


eM 5 must remain parallel

**₩**€




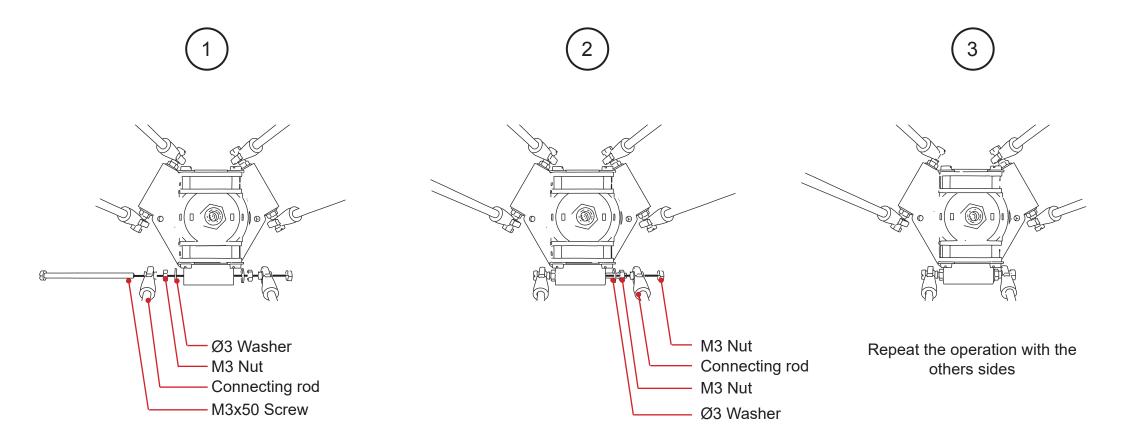



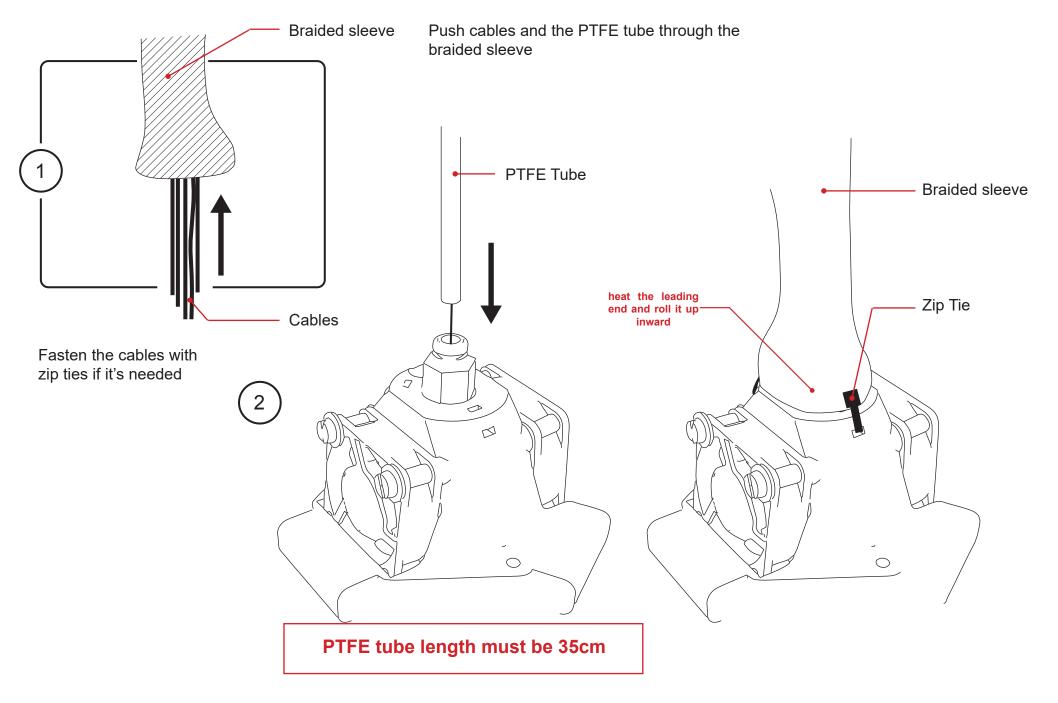




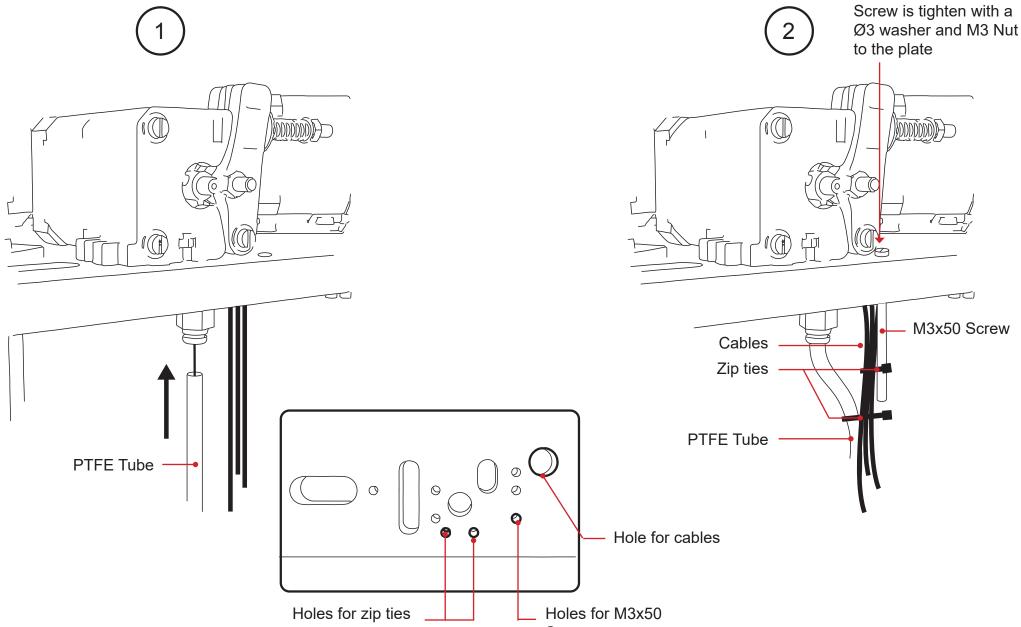


Screws

/ 48



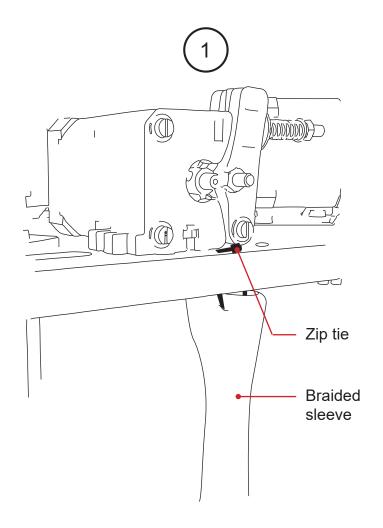


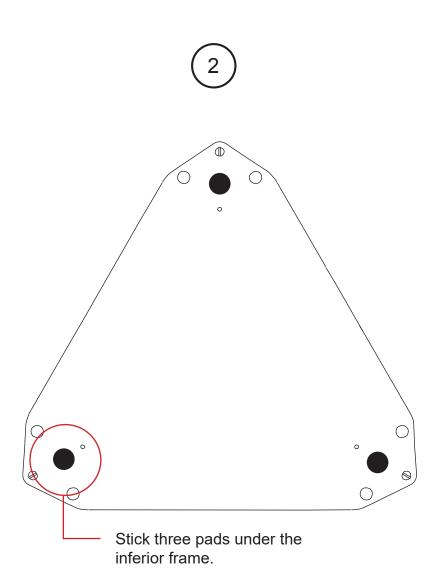




# ELECTRONIC ASSEMBLY



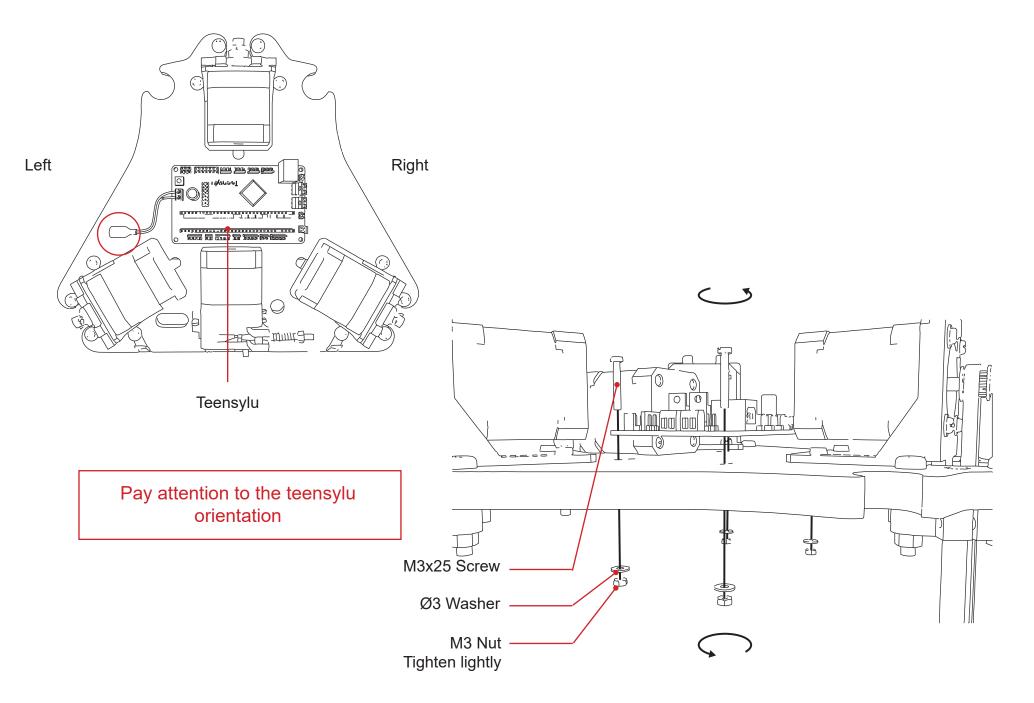




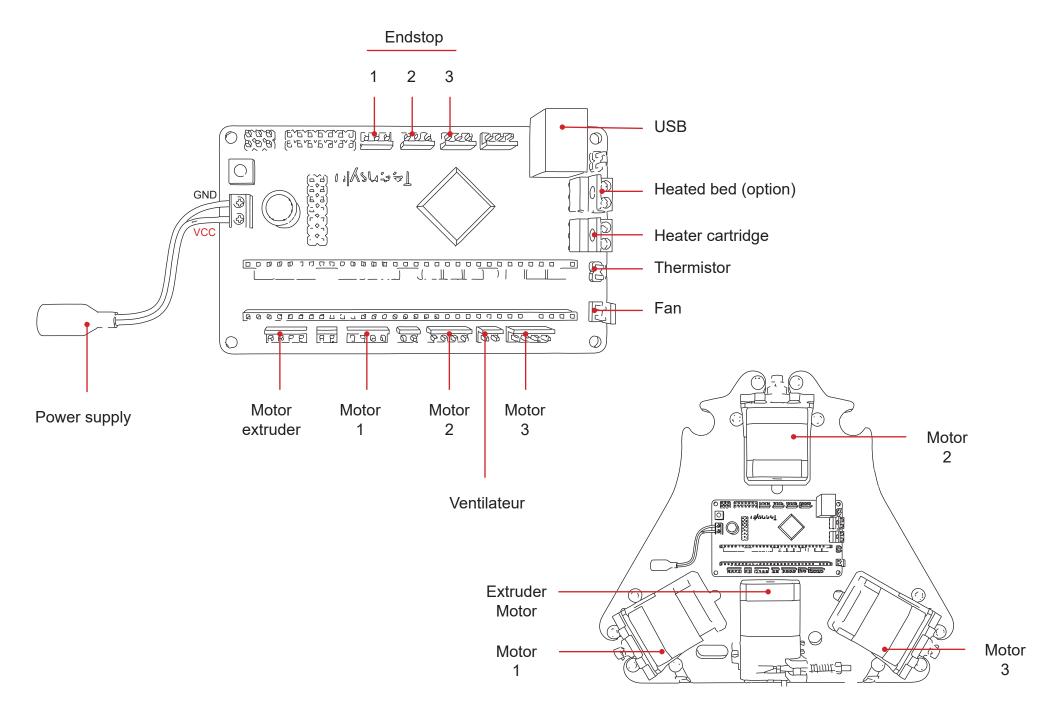


/ 52



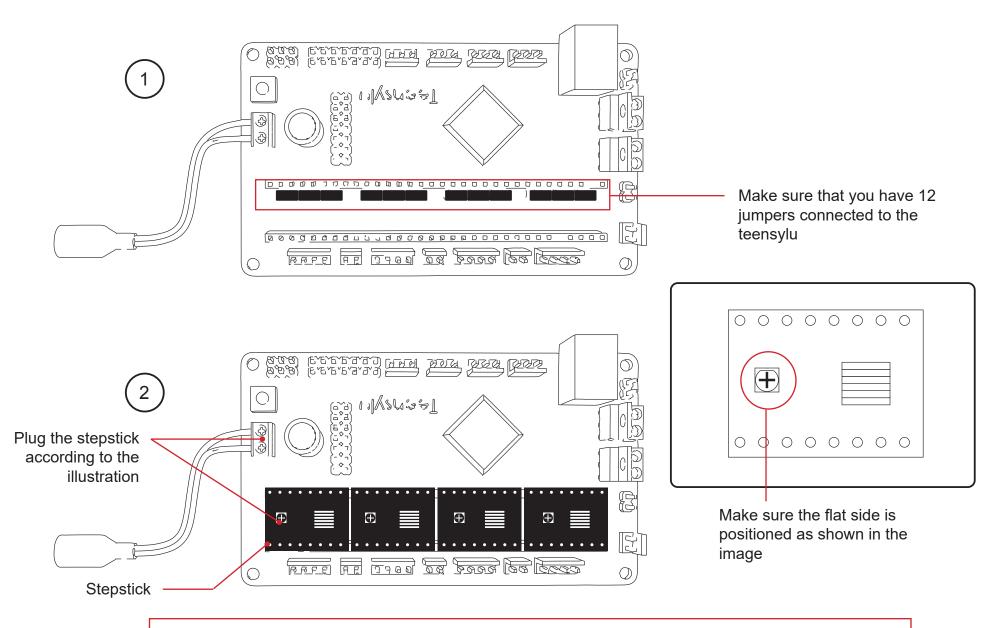


Be careful: The orientation is very important! (A wrong connection of stepsticks could cause permanent damage) / 53




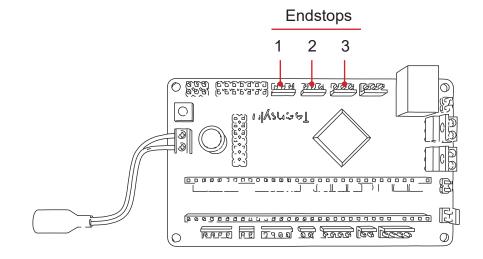


- Plug endstops
- Endstops can be plugged in only one orientation

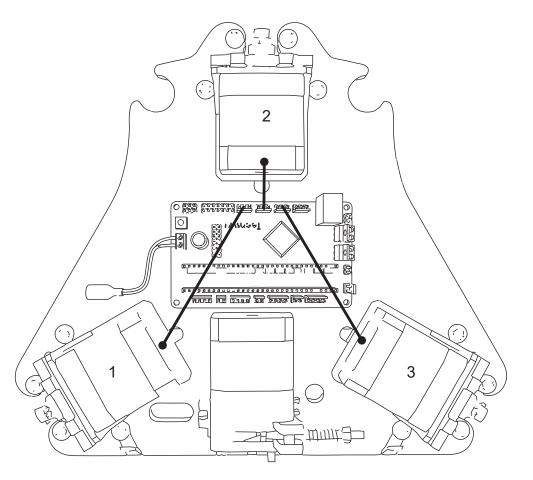




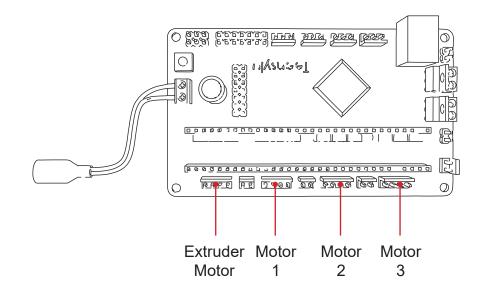


- Plug motors
- Motors can be plugged in only one orientation

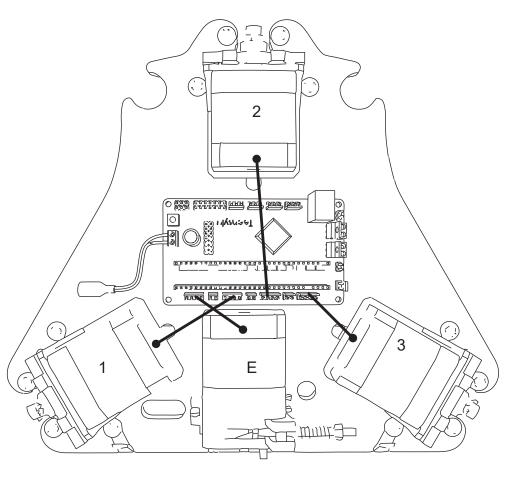



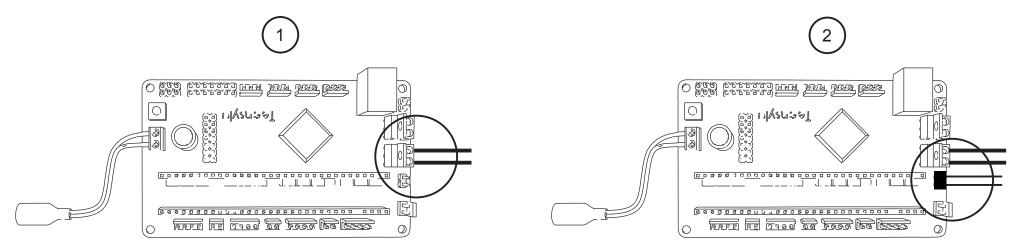

Screw cables of the heater cartridge There is no specific way, don't forget to denude it Plug the thermistor There is no specific way

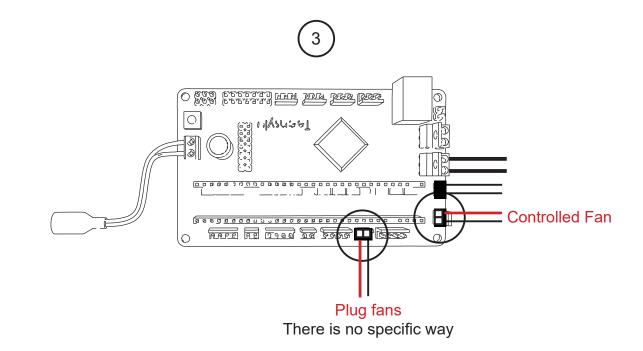



# **CONGRATULATION !** You're printer is now operationnal





# ADD-ONS




# **HEATED BED**

### 1. Hardware update


Kit :




Warning : if your heating patch is not equipped with a pre-mounted thermistor, attach the thermistor with white cable with the glass ball in the center of the patch and use polyimide tape.

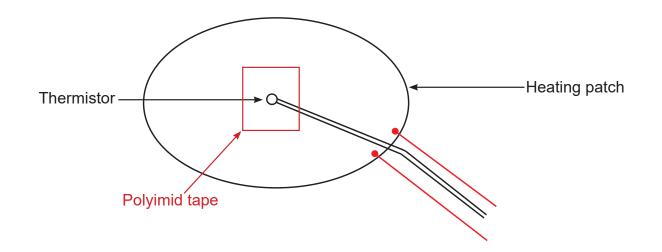




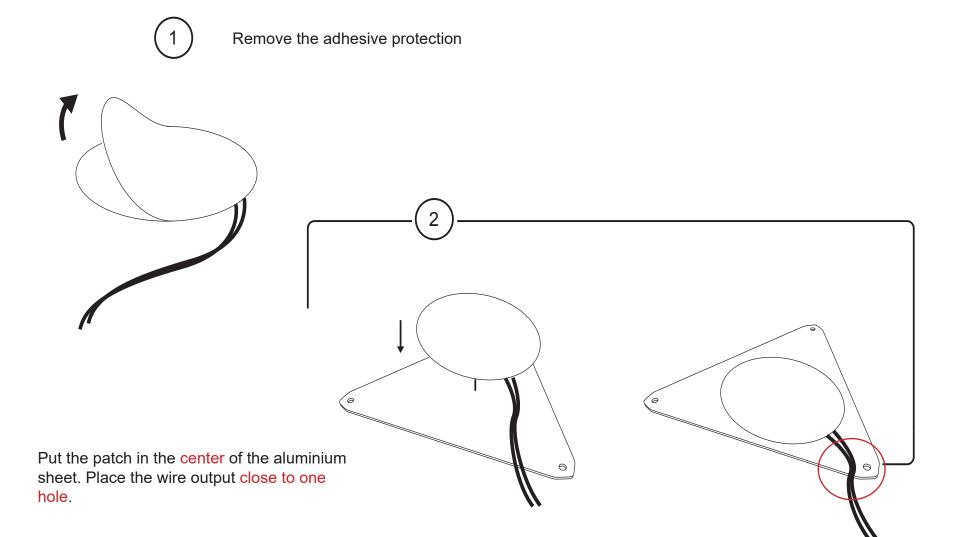




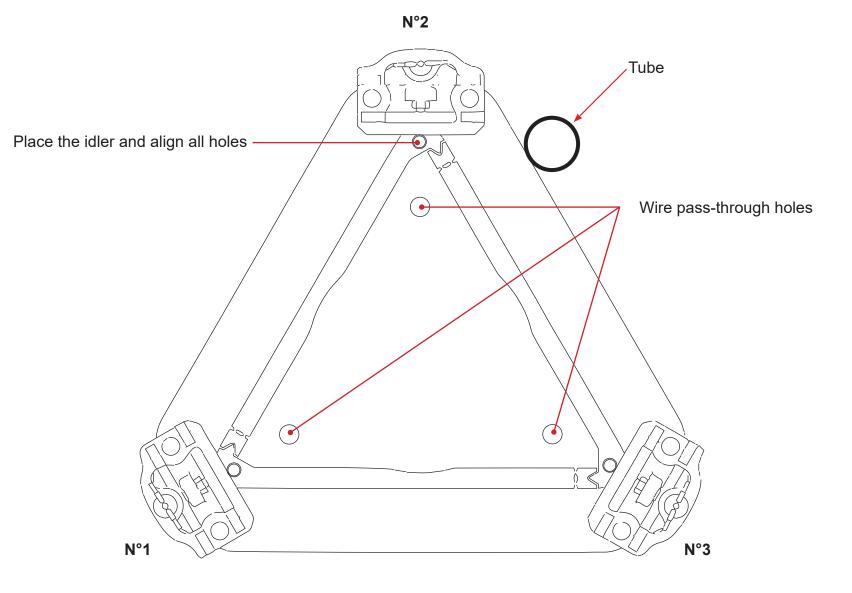




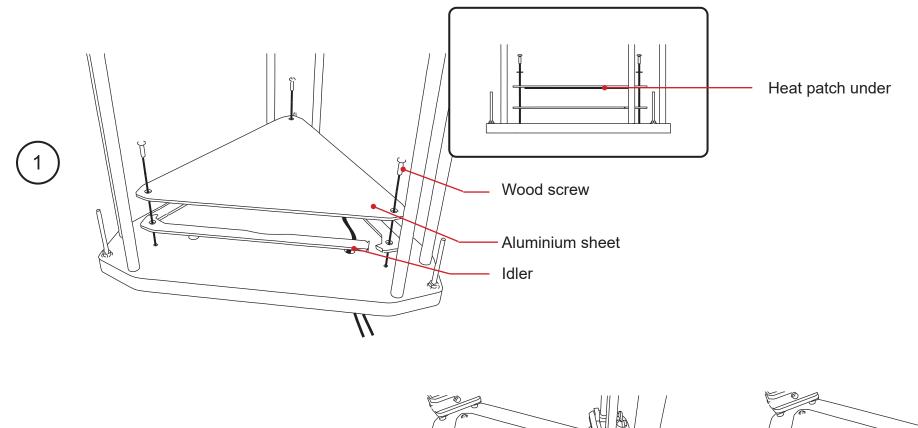

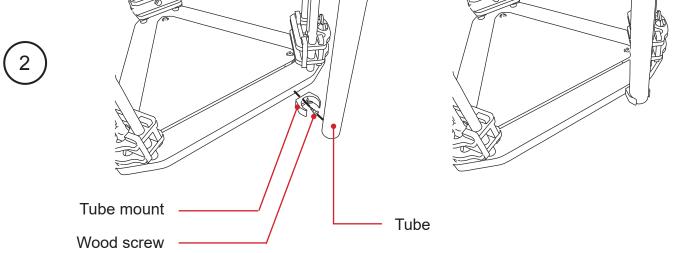



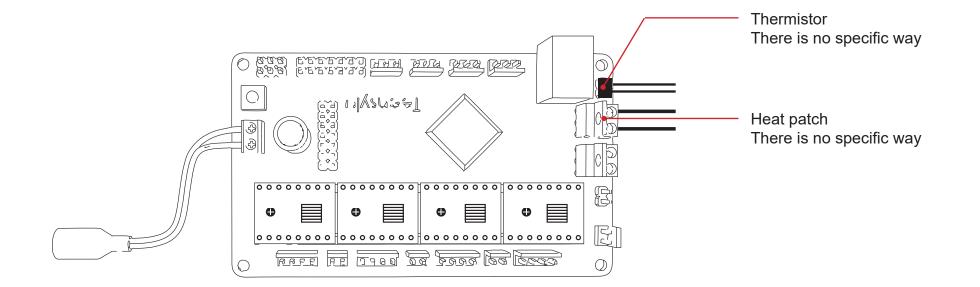



#### 2. Software update

Pre-requirement :

Computer with window 7+ (others OS coming soon)

Download and install the Serial\_install.exe from our download center on our website

Where to download :

All files can be found on our support section or on our github


1/ Download the Manual\_update\_vx\_xx.zip

2/ Unzip the file and open the folder

	Name	Date modified	Туре	Size
	🌗 firmwares_emt	16/10/2014 16:58	File folder	
	avrdude.conf	22/09/2014 17:53	CONF File	538 KB
	avrdude.exe	22/09/2014 17:10	Application	502 KB
	libusb0.dll	08/11/2011 21:19	DLL File	43 KB
→	🚳 manual_update.bat	29/10/2014 18:25	Windows Batch File	2 KB


3/ Run the batch script .bat



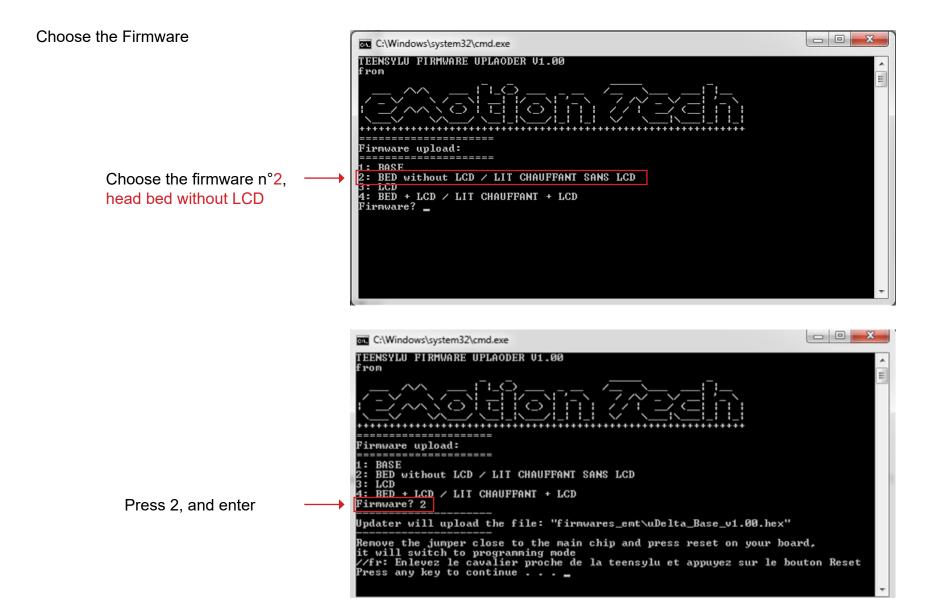




Select the programming mode

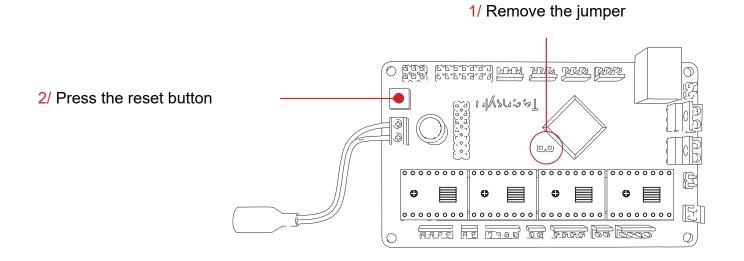

Please wait patiently before you computer detect and install the new COM port



Press Enter and check your COM port name :

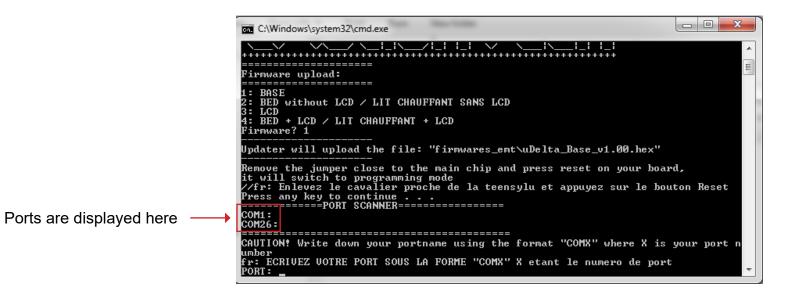

Note : Usually, the COM1 is your internal modem device, COM1 might not be the right port.



Caution: the syntax have to be perfect, ex: COM2

Type your COM port name (COM26 in our case) then press Enter key

C:\Windows\system32\cmd.exe		
Remove the jumper close to the main chip and press reset on your board it will switch to programming mode //fr: Enlevez le cavalier proche de la teensylu et appuyez sur le bout Press any key to continue ================================	ton Reset 🗉	
avrdude.exe: Version 5.11, compiled on Sep 2 2011 at 19:38:36 Copyright (c) 2000-2005 Brian Dean, http://www.bdmicro.cc Copyright (c) 2007-2009 Joerg Wunsch	om/	
System wide configuration file is "C:\Users\ghunt\Desktop\demo\Ma al_Update_v1.0\avrdude.conf"		
Using Port : \\.\COM26 Using Programmer : avr109 Overriding Baud Rate : 115200	Ŧ	




Final screen :

Avrdude.exe: safemode: hfuse reads as DB avrdude.exe: Send: Q [51] avrdude.exe: safemode read 1, efuse value: f0 avrdude.exe: safemode read 2, efuse value: f0 avrdude.exe: safemode read 2, efuse value: f0 avrdude.exe: safemode read 3, efuse value: f0 avrdude.exe: safemode: efuse reads as F0 avrdude.exe: safemode: efuses OK avrdude.exe: Send: L [4c] avrdude.exe: Send: E [45] avrdude.exe: Send: E [45] avrdude.exe: Send: E [45] avrdude.exe: Recv: . [0d] avrdude.exe: Recv: . [0d] avrdude.exe done. Thank you. 201001 PS: Do not forget to restore the jumper and press reset to switch to normal mode PS: //fr: oubliez pas de remettre le cavalier et rappuyer sur reset	C:\Windows\sy	stem32\cmd.exe	×
avrdude.exe: safemode read 2, efuse value: f0 avrdude.exe: Send: Q [51] avrdude.exe: Recv: . [f0] avrdude.exe: safemode read 3, efuse value: f0 avrdude.exe: safemode: efuse reads as F0 avrdude.exe: safemode: Fuses OK avrdude.exe: Send: L [4c] avrdude.exe: Recv: . [0d] avrdude.exe: Recv: . [0d] avrdude.exe: Recv: . [0d] avrdude.exe done. Thank you. 201001 PS: Do not forget to restore the jumper and press reset to switch to normal mode	avrdude.exe: avrdude.exe: avrdude.exe: avrdude.exe:	Send: Q [51] Recv: . [f0] safemode read 1, efuse value: f0 Send: Q [51]	
avrdude.exe done. Thank you. 301001 PS: Do not forget to restore the jumper and press reset to switch to normal mode	wrdude . exe : wrdude . exe :	safemode read 2, efuse value: fØ Send: Q [51] Recv: . [fØ] safemode read 3, efuse value: fØ safemode: efuse reads as FØ safemode: Fuses OK Send: L [4c] Recv: . [Ød] Send: E [45]	
	avrdude.exe d 001001 PS: Do not fo	one. Thank you. rget to restore the jumper and press reset to switch to normal	mode


Leave the programming mode :

1/ Set up the jumper back in place

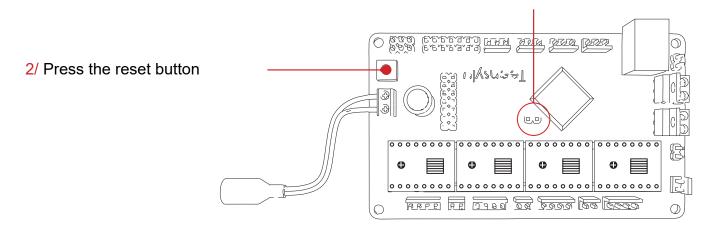

Your printer is now ready to print with the heated bed !




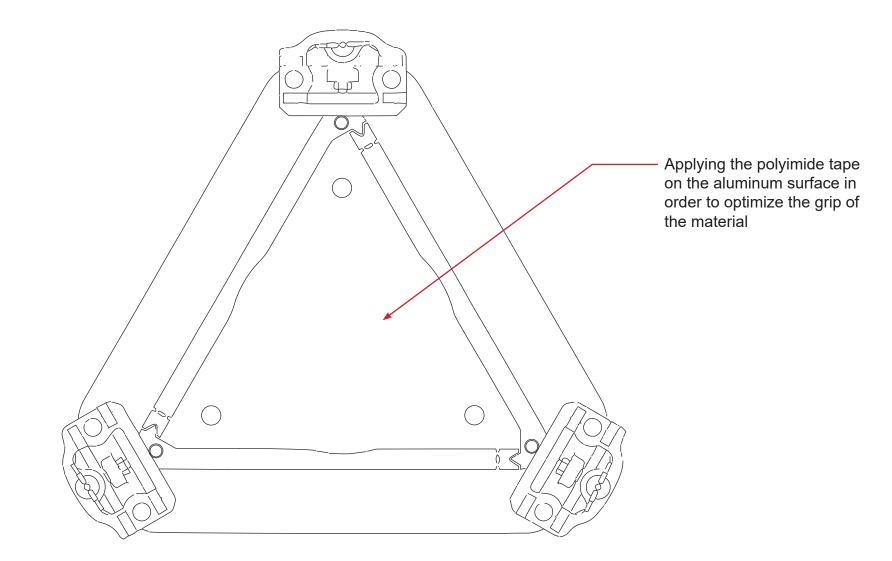

/ 70



## LCD Screen

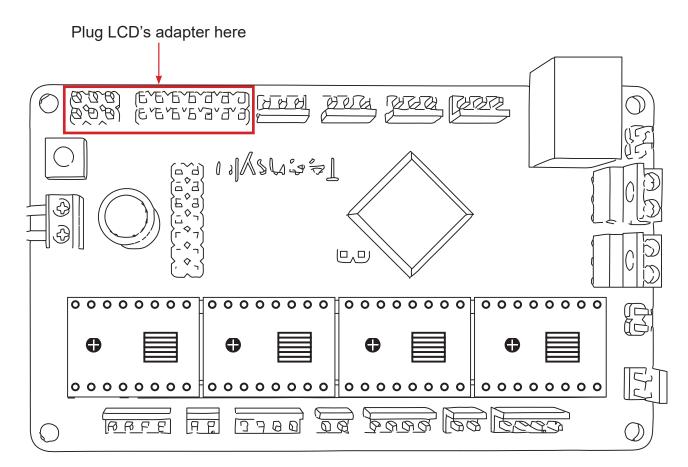


Then perform a «Manual Update» and select choice with your options.

Note: documentation containing explanations for using the «Manual Update» is available on our website reprap-3d-printer.com, in the support section.




# **SPOOL HOLDER**


1. Hardware update

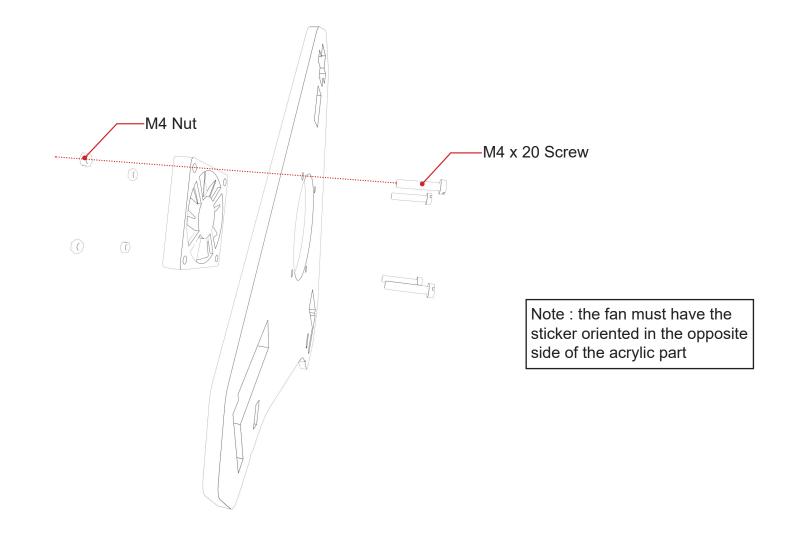




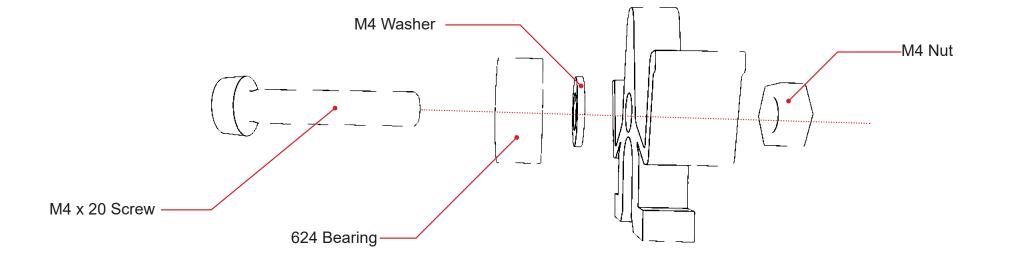



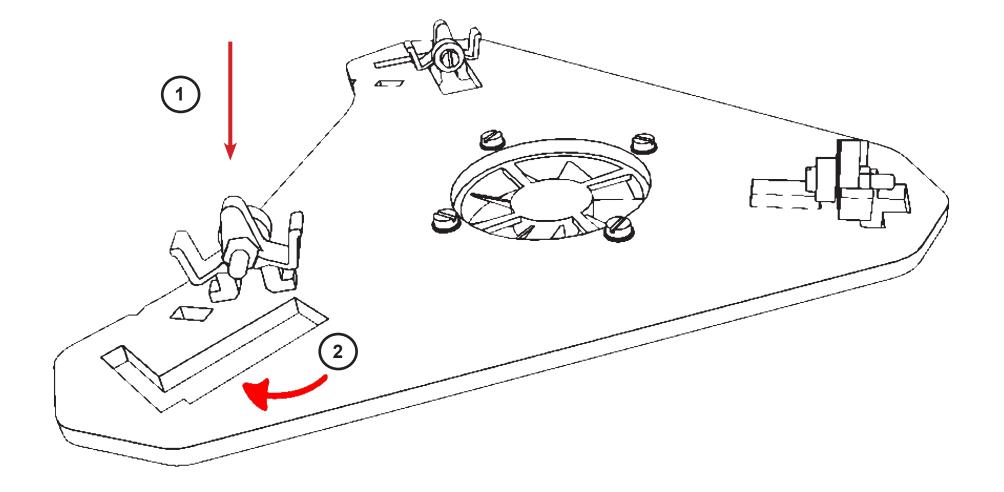




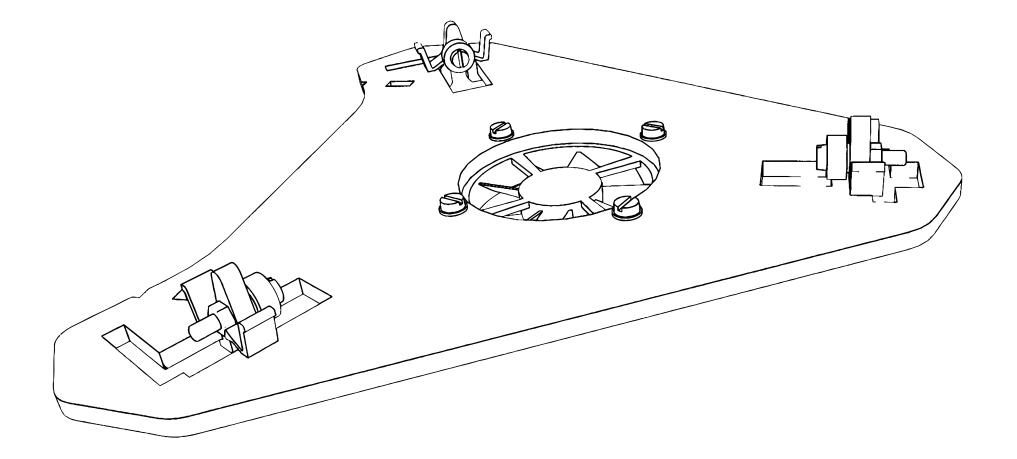




Fan plug

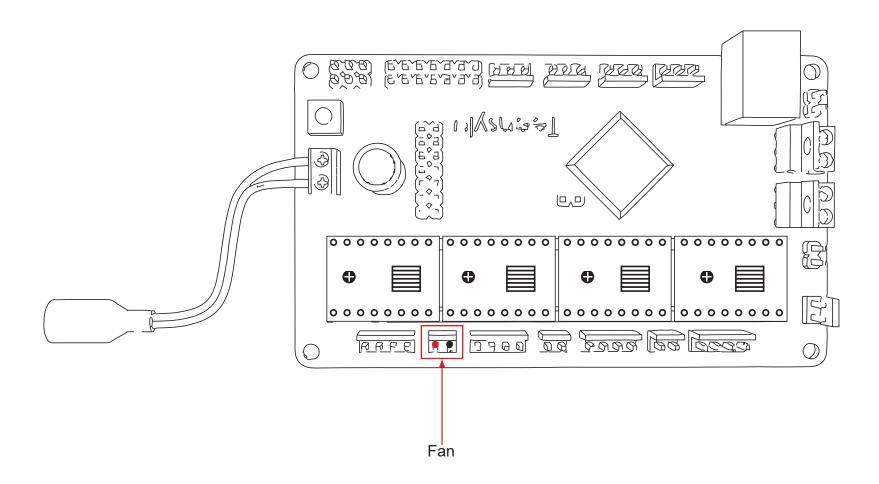




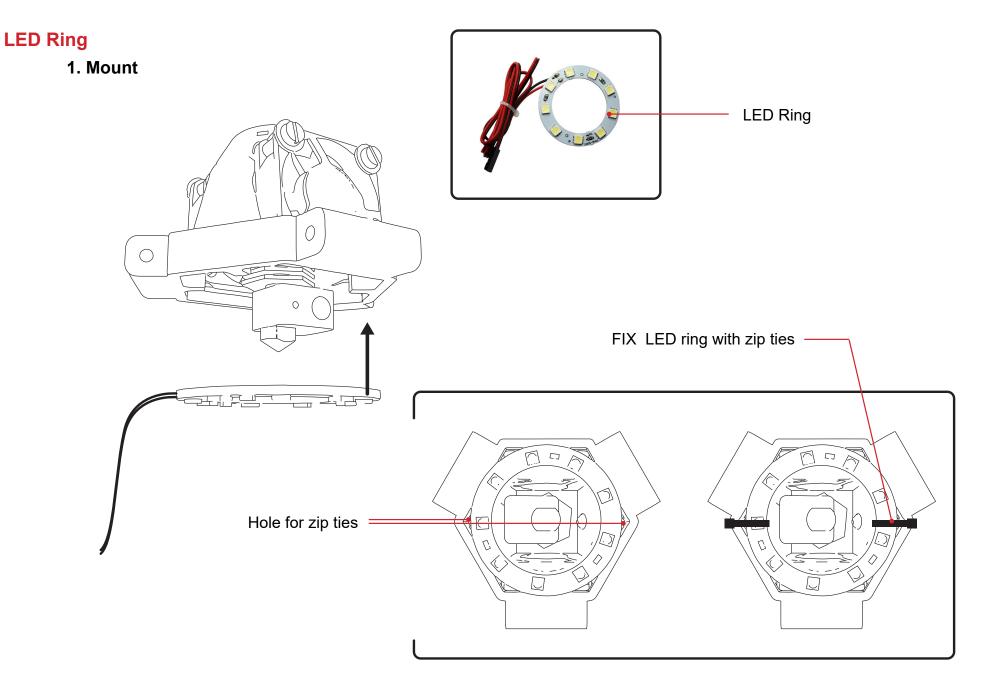



1. Wiring

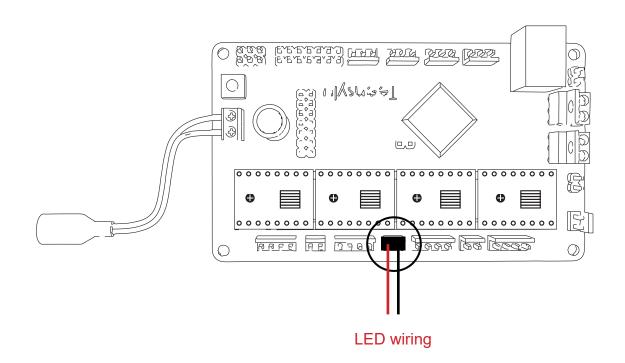

Pass wire into the central sleeve.



# MAINTENANCE



# Maintenance

A monthly maintenance of the 3D printer is recommended.

Below are some recommendations:

with the help of a brush, dust the following elements :

- Teensylu board
- stepsticks heatsinks
- all fans and ensure that airflow is not blocked
- coldend of the print head

- clean the print head with the help of the guide dedicated to the Hexagon print head, here is the link: : <u>http://data.emotion-tech.com/highlights\_en/Hexagon%20-%20Hotend-guide-v1.1.pdf</u>

- clean the drive wheel's teeth with the aid of a needle, the end of a tweezers or a cutter blade

- check the tightening of each screw equipping the 3D printer

- lubricate all mechanical transmission elements with multi-purpose grease or PTFE based oil spray (avoid WD40 product that has a tendency to be too aggressive for the mechanical elements)

# Recommandations

#### Shut down the 3D printer :

After printing, if you want to turn off the machine, wait until the print head has cooled to room temperature to ensure that the print head does not clog.

## Transport :

If you have to move the machine by car or other means of transport, it is recommended to unplug stepper motors off the Teensylu board to avoid damaging components.

## Troubleshooting :

A FAQ is available for the µDelta on our website in the «Support» section, do not hesitate to consult it if you are having trouble with your machine, most failures are resolved through this tool, do not deprive yourself !





# Thank you for choosing the µDelta